


# Making a Simple Box

1. Mat'l = 2" square block approx 3" Long.
2. Mount between centers and turn cylindrical with tenon on one end.
3. Mount piece in chuck.

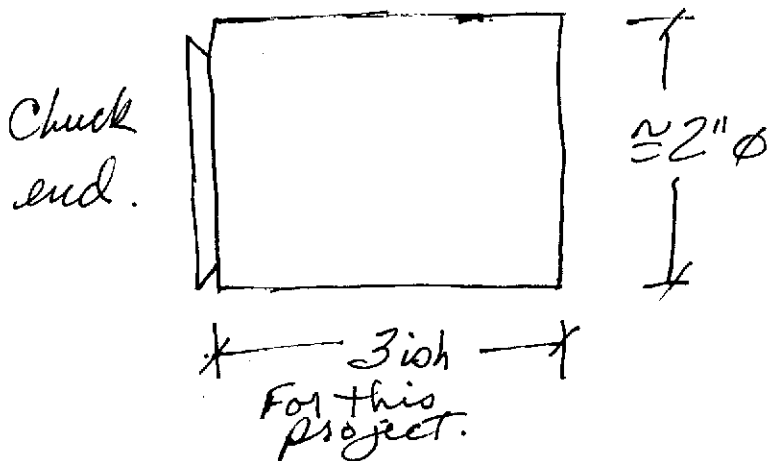

4. With piece mounted in chuck and on Lathe, true outboard end. You might slightly concave the top at this time.
5. Using parting tool, cut square edged dado  $\approx 5/16''$  wide x  $1/4''$  deep. Be sure sides are parallel and bottom is square. A  $1/4''$  square parting tool is ideal for this.

